

fleurieu coast event & party hire

Instructions ~ Epson Projector EB-X140

Data Cable Options (Supplied)

1. HDMI connect HDMI cable to device
2. Computer connect BLUE VGA cable
3. USB-A use USB stick direct into Projector

SET UP

1. Connect Power Cord
2. Connect Data cable (you may connect more than 1)
3. Open lens window
4. Turn on computer or (other source device) First
5. Turn projector STATUS button to ON
6. Set focus and distance as required

The projector will search for the attached device or devices
Use arrows on projector or on the remote to change if necessary

7. If using a computer make sure F5/F8 key is set as required for projection

WHEN FINISHED

1. Turn Projector off
2. Let cool (5 to 10 min)
3. Disconnect all cords while cooling
4. Close window and repack

CONTENTS

1	x	Projector
1	x	Set Instructions (Quick Reference)
1	x	Power Cord
1	x	Blue VGA Cord
1	x	HDMI Cord
1	x	Carry Case

For the full 150 page instruction book refer to our websites home page

www.fceventpartyhire.com.au